



## Spare parts list AUMATIC

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Delivered spare parts may slightly vary from the representation in these instructions.

| Ref. no. | Designation  | Type         |
|----------|--|--------------|
| 002.0    | Local controls   | Sub-assembly |
| 002.3    | Local controls board   | Sub-assembly |
| 002.4    | Face plate for display                                       |              |
| 006.0    | Power supply unit  | Sub-assembly |
| 008.1    | I/O board  |              |
| 008.1    | Fieldbus board   |              |
| 009.0    | Logic board  | Sub-assembly |
| 011.1    | Relay board  | Sub-assembly |
| 012.0    | Option board   |              |
| 500.0    | Cover  | Sub-assembly |
| 501.0    | Ex plug/socket connector with screw-type terminals (KP, KPH) | Sub-assembly |
| 501.1    | Screw for control terminal                                   |              |
| 501.2    | Washer for control terminal                                  |              |
| 501.3    | Screw for power terminal                                     |              |
| 501.4    | Washer for power terminal                                    |              |
| 502.0    | Pin carrier (without pins)                                   |              |
| 505.0    | Pin for controls   | Sub-assembly |
| 506.0    | Pin for motor  | Sub-assembly |
| 507.0    | Cover for electrical connection                              | Sub-assembly |
| 508.0    | Switchgear   | Sub-assembly |
| 509.1    | Padlock  | Sub-assembly |
| 510.0    | Fuse kit   | Set          |
| 532.0    | Cable conduit (actuator connection)                          | Sub-assembly |
| 535.1    | Retaining ring   |              |
| S        | Seal kit   | Set          |